

## Smoke Sensor—AP9323



Warning

**Do not connect the smoke sensor to anything other than the Environmental Management System. Doing so could damage the sensor.**




Note


The sensor will operate best if placed near the top of the enclosure.

Use the mounting bracket to install the sensor in an APC NetShelter<sup>®</sup> or other standard 19-inch enclosure. To install in a NetShelter enclosure:


1. Remove the base of the sensor.

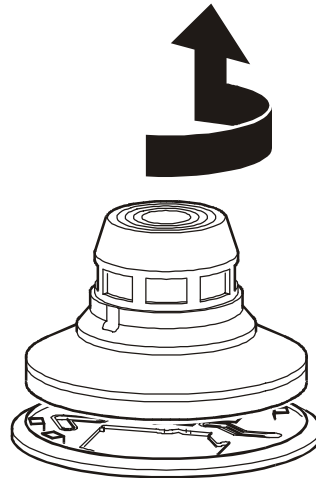

2. Attach the base to the bracket, using the 4×8mm screws (provided).

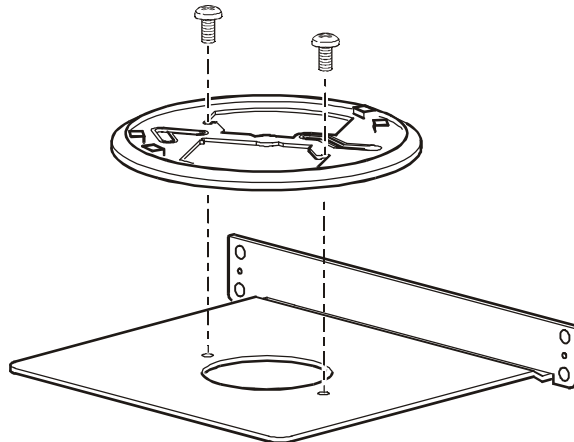

3. Route the cable through the hole on the mounting bracket.
4. Secure the sensor to the base— rotate it clockwise and lock it in place.

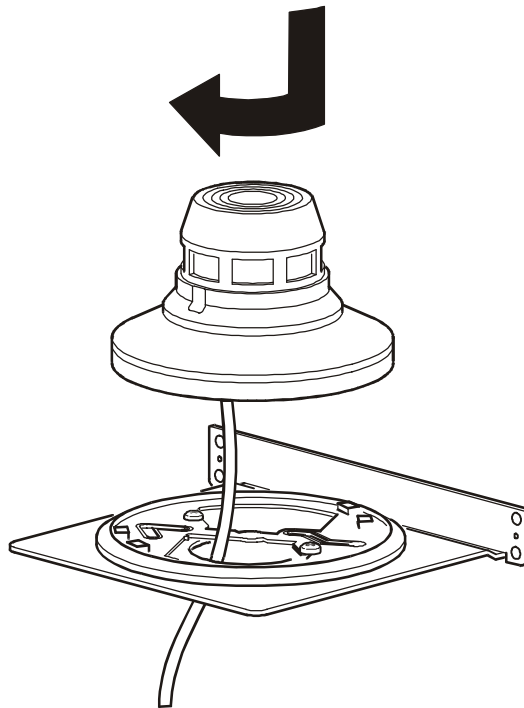


5. Choose a location in the enclosure for the sensor. It may be mounted at any unused position along one of the front or rear vertical mounting rails.
6. Install two caged nuts (provided with the enclosure) above and below a notched hole on one vertical mounting rail in your chosen location.




Note


The sensor occupies **two** U-spaces. A notched hole on the enclosure's vertical rail denotes the middle of a U-space.

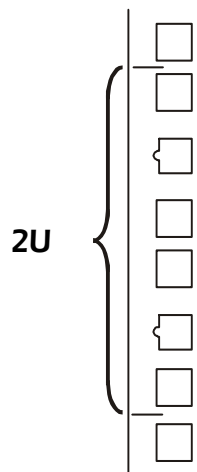

7. Turn the mounted sensor over so that the cable points toward the roof of the enclosure. Align the mounting holes of the bracket with the installed caged nuts. Insert and tighten the screws (provided with the enclosure).

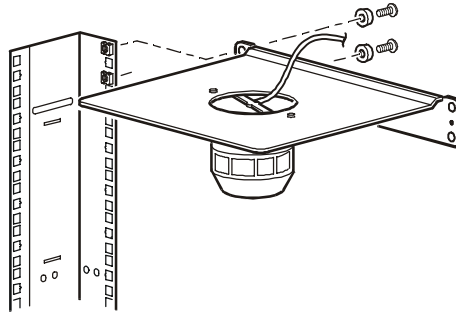

8. Neatly route and secure the 12-foot cord with tie-wraps or cable clips.
9. Plug the smoke sensor into the port marked **Smoke** on the rear panel of the Environmental Management System.

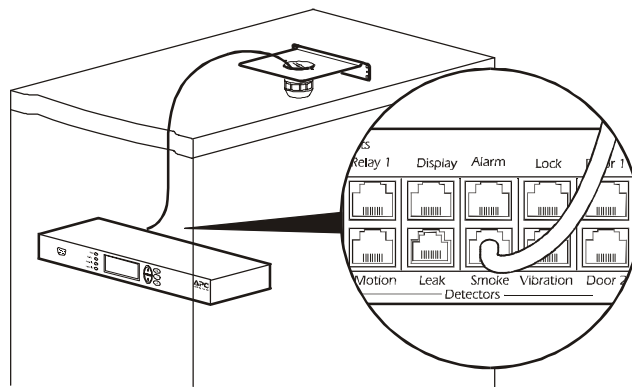

## APC Worldwide Customer Support

Customer support for this or any other APC product is available at no charge in any of the following ways:

- Visit the APC Web site to find answers to frequently asked questions (FAQs), to access documents in the APC Knowledge Base, and to submit customer support requests.
  - **www.apc.com** (Corporate Headquarters)  
Connect to localized APC Web sites for specific countries, each of which provides customer support information.
  - **www.apc.com/support/**  
Global support with FAQs, knowledge base, and e-support.
- Contact an APC Customer Support center by telephone or e-mail.
  - Regional centers:

APC headquarters U.S., Canada	(1)(800)800-4272 (toll free)
Latin America	(1)(401)789-5735 (USA)
Europe, Middle East, Africa	(353)(91)702020 (Ireland)
Japan	(0) 3 5434-2021

- Local, country-specific centers: go to **www.apc.com/support/contact** for contact information.

Contact the APC representative or other distributor from whom you purchased your APC product for information on how to obtain local customer support.

Entire contents copyright © 2003 American Power Conversion. All rights reserved.

Reproduction in whole or in part without permission is prohibited. APC, the APC logo, InfraStruXure, and NetShelter are trademarks of American Power Conversion Corporation and may be registered in some jurisdictions. All other trademarks, product names, and corporate names are the property of their respective owners and are used for informational purposes only.

